

greenVDSL (G. Fast)

FRITZ!Box 7583


Installation / Internet Connection



Connect the FRITZ!Box 1

1.1 Connect power adapter

Connect the power adapter with your FRITZ!Box and the power socket. "Power" LED starts blinking green. After a few seconds the "Power" LED will shine constantly. The FRITZ!Box is now ready for operation.

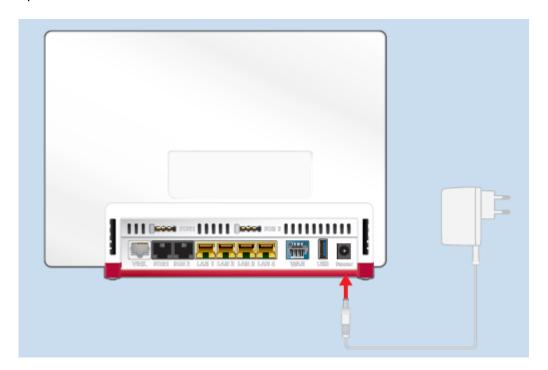



1.2 DSL cable

Use the Y-cable (DSL cable) supplied. Connect the FRITZ!Box to the telephone socket with one of the long cable ends. Connect the short end to the FRITZ!Box at "DSL".

The FRITZ!Box establishes the Internet connection and restarts itself. This process can take up to 15 minutes.





1.3 Description LEDs

| Pos. | LED | State | Meaning |
|------|--------|----------------|--|
| 1 | Power | blinking | FRITZ!Box is starting |
| | | shining | FRITZ!Box is ready |
| 2 | Inter- | blinking | Connection to a modem or router exists, but the Internet |
| | net | | connection is not available or is being connected |
| | | shining | Internet connection is available |
| 3 | WLAN | shining | WLAN is active |
| | | blinking | New wlan settings are accepted |
| | | | WLAN turning on/off |
| | | | WPS is running |
| 4 | Fon | shining | Telephone connection exists |
| | | blinking | New Message in your Voice-Mailbox |
| 5 | Info | blinking green | Updating firmware |
| | | | New messages on your FRITZ!Box answer machine |
| | | blinking red | Error on FRITZ!Box |






2 Network connection to your computer

2.1 Connection with network cable

If you connect your computer with a network cable, attach the yellow cable to a free LAN port on your FRITZ!Box.

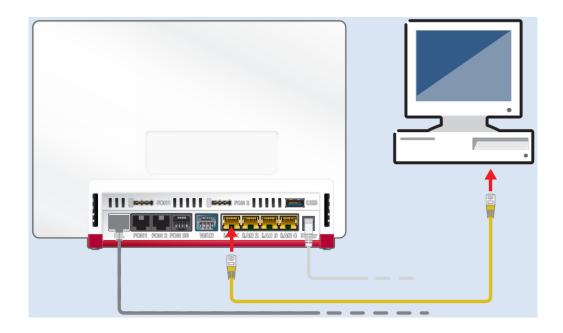

2.2 Wireless network connection

If you connect your computer with a wireless connection (WLAN) you need it's name and password. Your FRITZ!Box is already configurated for a wireless connection. Your wireless-name (SSID) and the password for the wireless connection are on the back of your FRITZ!Box.





3 Configuration of the FRITZ!Box


3.1 Access your Fritz!Box

First you must connect to the FRITZ!Box user interface. Make sure that your computer is connected to the FRITZ!Box by network cable or WLAN.

Following enter "fritz.box" or 192.168.178.1 in your browser's address line (e.g Internet Explorer or Safari)."


3.2 Select language

Select "English" and confirm with "OK"

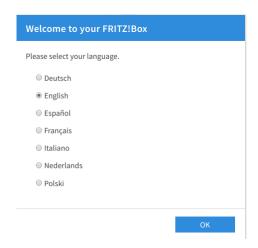

3.3 Enter password

You are now asked to enter the password. The default password is on the back of your FRITZ!Box.

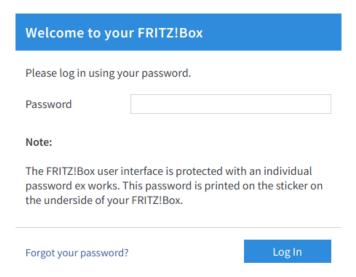


V2.3



3.4 Regional settings.


Select "Switzerland" and confirm with "Next".

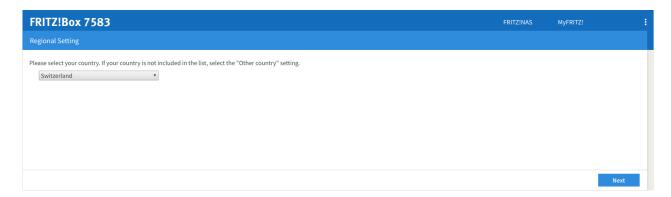

The FRITZ!Box will restart now. After the restart (approximately 2 minutes) you have to sign in again with the same password as before. Now you get redirected to the FRITZ!Box interface.

3.5 Annex Setting

Please select "Annex A" for the analogue Internet connection or "Annex B" for the ISDN Internet connection. Click on "Next" to continue.

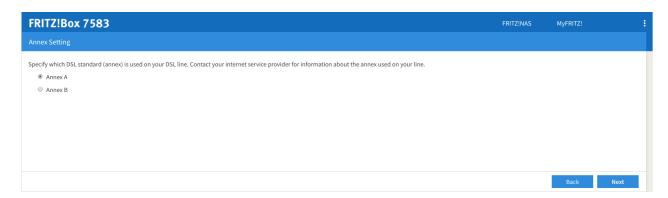

Afterwards cancel the assistant. Click on "Cancel" to do this.

3.6 Account Information

Select "Internet" and then "Account Information" in your FRITZ!Box Interface.


Internet provider = green.ch

Remove the check mark for "Check Internet access after "Apply" and then apply.



4 Optional configuration

On the user interface you get more information about the FRITZ!Box configuration. Also, you can make additional settings (only recommended to experienced users). To active the advanced view, click **View: Default** in the bottom end of the interface. It will now switch to **View: Advanced**".

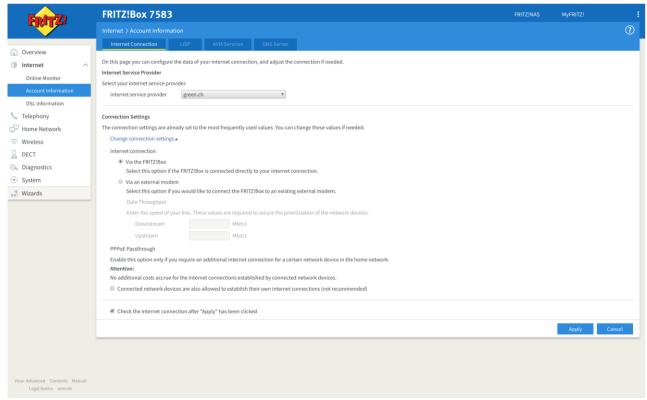


You can find the manufacturer's official manual at:

https://en.avm.de/service/manuals/fritzbox/Sie unter: http://avm.de/service/handbuecher/fritzbox/

We are happy to be of service:

 Monday – Friday 08.00 – 17.30 Hotline 056 460 23 23

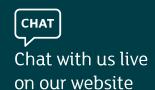

moving. forward. together.

Green AG • Industriestrasse 33 • 5242 Lupfig • Switzerland • www.green.ch